


# ***C-View™ Active Infrared***


## **WIDE FIELD OF VIEW NEAR IR IMAGING FOR PERIMETER AND MOUNTED SURVEILLANCE**

The C-View Active Infrared Camera provides ultra-wide field of view day/night surveillance to provide greater area coverage with significantly fewer cameras. The optical system images a full hemispherical field of view illuminated with 940 nm IR LEDs that are not visible by the human eye for covert night time surveillance. The system is available with two different types of cameras (low cost analog or high resolution and higher sensitivity digital), and two IR illuminations powers (50W and 100W) for various indoor and outdoor surveillance applications.

<b>Imaging Field of View</b>	+/- 120°	<b>Power Requirement</b>	110 V AC, 12 A
<b>Sensor, Low Res</b>	Analog CCD, NTSC	<b>Illumination Power</b>	50W & 100 W (CW)
<b>Sensor, High Res</b>	Digital CCD, 3 MPixel	<b>Unit Dimensions</b>	Ø 41 cm x 38 cm Ø 56 cm x 47 cm
<b>Illumination <math>\lambda</math></b>	940 nm	<b>Unit Weight</b>	20 lbs

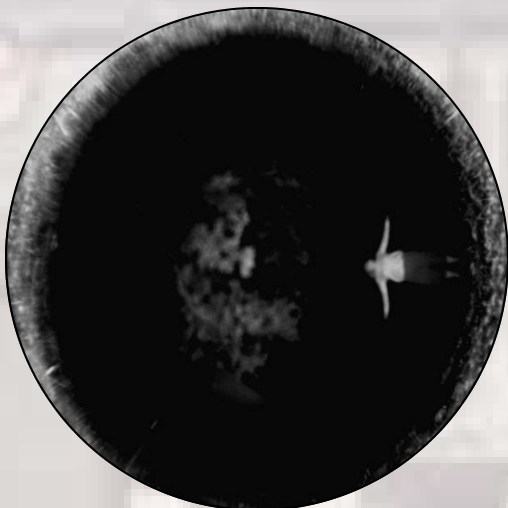

**LOW RES CAMERA: OUTDOOR NIGHT IMAGE WITH 50 W IR ILLUMINATION**

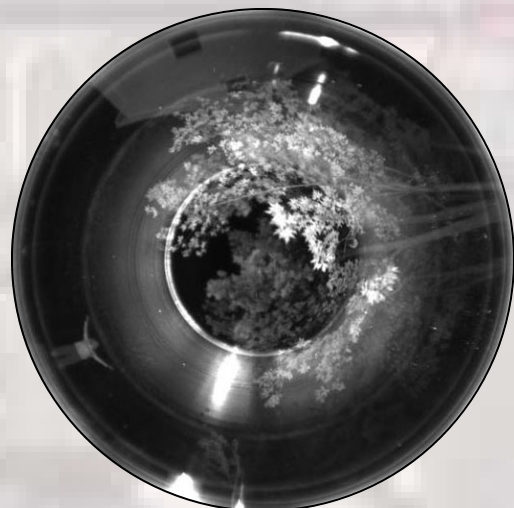

**HIGH SENSITIVITY & RES CAMERA: OUTDOOR NIGHT IMAGE WITH 50 W IR ILLUMINATION**